



Note:

Jet pump 1 is connected to water diverter valve 1, which is connected to group A and group B water distributor. Group A water distributor is connected to the A1 jets, Jet pump 1

Group B water distributor is connected to the B1 and B2 jets.

Jet pump 2 is connected to the group D water distributor, which is connected to the D1 jets.

The circulation pump 1 is connected to the Group C water distributor, which is connected to the C1 jets; fountain and UV sterilizer;

Jet pump 3 is connected to water diverter valve 2, which is connected to group E and group H water distributor. Group E water distributor is connected to the E1 jets,

Group H water distributor is connected to the H1 and H2 jets.

Jet pump 4 is connected to water diverter valve 3, which is connected to N and K swim jets.

Jet pump 5 is connected to water diverter valve 4, which is connected to group M water distributor and G swim jets.

Group M water distributor is connected to the M1 and M2 jets.

The circulation pump 2 is connected to the Group F water distributor, which is connected to the F1 jets; fountain and UV sterilizer;

The air blower and fountain are optional, please pay attention to the configuration and order requirements.

The fountain is controlled by a water inlet switch; The air blower is connected to all bubble jets and aromatherapy tanks;

I air valve is connected to the A1 and B1; B2 jets. L air valve is connected to the D1 and C1 jets.

W air valve is connected to the H1 and H2 jets. V air valve is connected to the E1 and F1 jets.

Q air valve is connected to the M1 jets. P air valve is connected to the M2 jets.

Y air valve is connected to N and K swim jet. T air valve is connected to G swim jet.

The dotted circle indicates the range of the point.

5pcs jet pump+ 2pc circulation pump

ZR7807/ZR7808 Spa Front View

LOVIA
SPA MANUFACTURER